


MAGNETIC CAR AIR VENT MOUNT PHONE HOLDER






Place the metal plate between your device & protective case

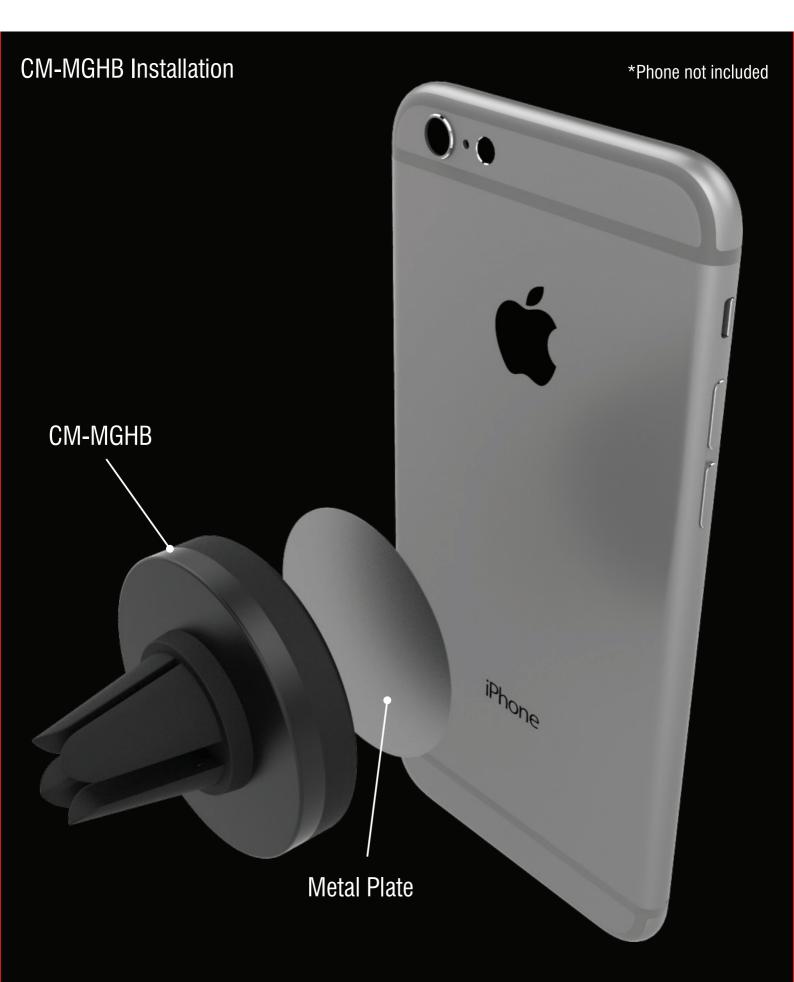

Stick the metal plate to the back of your device using the 3M adhesive

CM-MGHB Installation

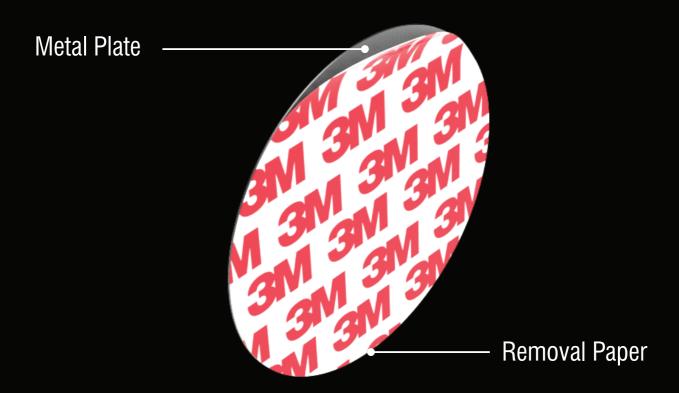

Note: When placing the metal plate between the case and phone, apply the included protective film before using the mount to avoid scratching the device.

