



USB 3.1 ENCLOSURE FOR NVMe PCIe M KEY M.2 SSD



EC-NVME / QUICK INSTALLATION GUIDE

FEATURES

- USB 3.1 Enclosure for NVMe PCIe M Key M.2 SSD
- Compatible with Sizes: 2230 / 2242 / 2260 / 2280

SYSTEM REQUIREMENTS

- Windows 7 or higher / Mac OS 10 5 or higher

PACKAGE CONTENTS

- USB 3.1 Enclosure for NVMe PCIe M Key M.2 SSD
- USB Cable
- USB Type-C Adapter
- Set of screws and rubber feet

1

Remove screws

**2**

Remove bottom plate



**3**

At a 45-degree angle, slide in your SSD until it is properly seated


**4**

Screw in retainer screw to hold you SSD in place



5

Reattach bottom plate and fasten the screws in place

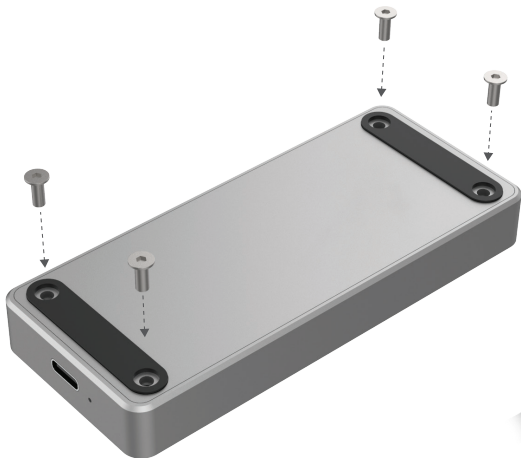

6

Connect USB cable to both the device and the computer



FOR HELP, COMMENTS, QUESTIONS OR CONCERNS
PLEASE CONTACT OUR TECH SUPPORT TEAM VIA OUR WEBSITE

WWW.SABRENT.COM