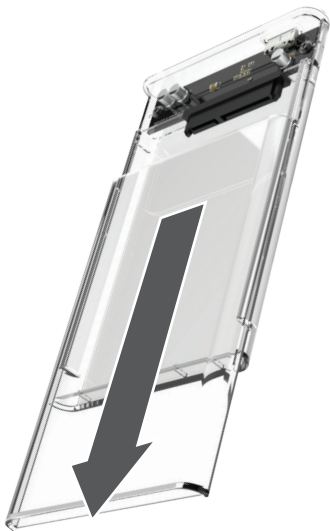# 2.5" SSD/SATA HARD DRIVE USB 3.0 ENCLOSURE

Remove the lid by carefully sliding it out

The Sabrent clear enclosure does not need any screws to be securely attached

Install the disk

Slide the lid back in until it snaps
Connect the cable to both the enclosure
and the PC

NOTE: This product is Plug & Play
and it does not need additional drivers to work